


CW6CDC

CONTROLLER

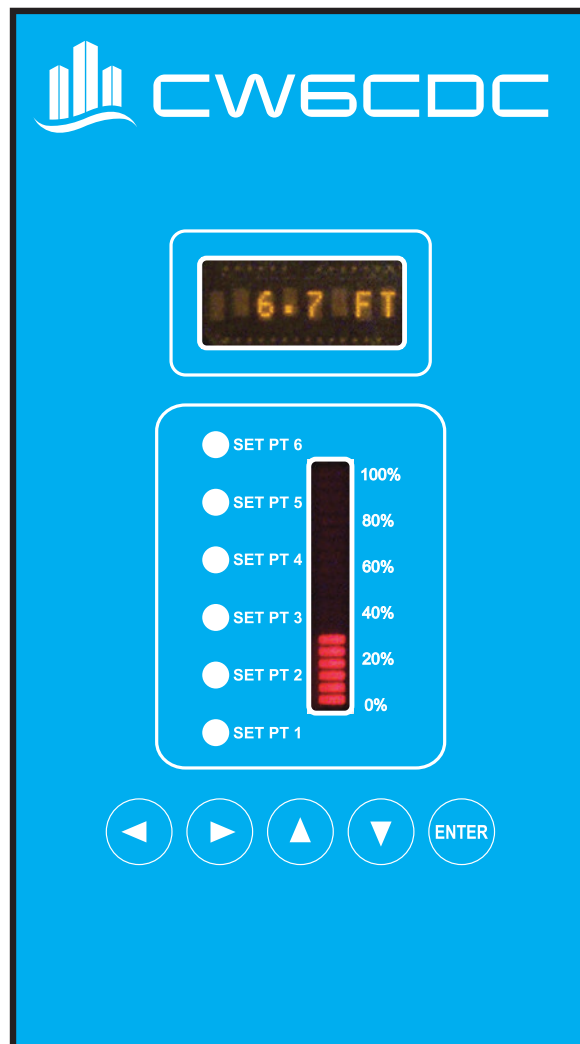

User Manual



WATER SYSTEM INTEGRATOR AND CONTROLS PROVIDER

WWW.PRIMEXCONTROLS.COM

844-4PRIMEX (844-477-4639)

TABLE OF CONTENTS
REVISION B • FIRMWARE REVISION B2.02

introduction.....2

warnings3

installation & dimension data.....4-5

electrical connections6

function keys / displays.....7

setting up levels and simulation8-9

configuration9-11

configuration mode parameters12

run mode parameters.....13

specifications.....14


warranty15

notes.....16



WWW.PRIMEXCONTROLS.COM

CW6CDC LEVEL CONTROLLER INTRODUCTION

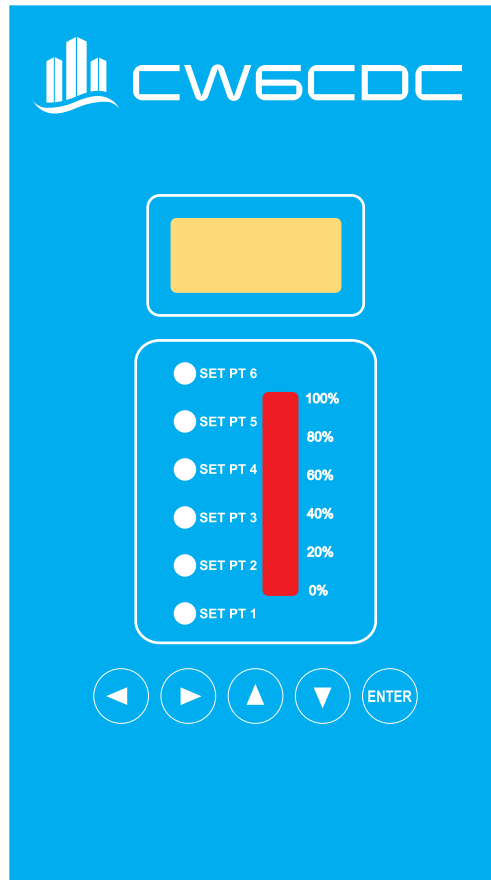

The CW6CDC level controller is a simple, easy-to-use microprocessor-based controller capable of monitoring any 4-20 mA signal. It has six programmable relay outputs that can be used for control and alarm. The transducer input zero and span are fully configurable. A simulation mode allows the user to test set-points and relay operation.

The **standard CW6CDC** level controller kit contains (see **Figure 2** on **page 5** of this manual):

- one CW6CDC level controller
- two mounting brackets for panel mounting
- a three pin power supply connector block (P1)
- a 18 pin relay output connector block (P2)
- a five pin transducer connector block (P3)

WARNINGS

Failure to read and understand the information provided in this manual may result in personal injury or death, damage to the product or product failure. Please read each section in its entirety and be sure you understand the information provided in the section and related sections before attempting any of the procedures or operations given.

Failure to follow these precautions could result in serious injury or death. Keep these instructions with warranty after installation. This product must be installed in accordance with National Electrical Code, ANSI/NFPA 70 so as to prevent moisture from entering or accumulating within the controller housing. **See additional specifications on page 14 of this manual.**

WARNING

ELECTRICAL SHOCK HAZARD



Disconnect power before installing or servicing this product. A qualified service person must install and service this product according to applicable electrical codes.

- Do not install in area with: excessive or conductive dust, corrosive or flammable gas, moisture or rain, excessive heat, regular impact shocks or excessive vibration.
- Do not place in water or let water leak onto the controller.
- Do not allow debris to fall inside the unit during installation.
- Double-check all the wiring before turning on the power supply.
- Do not touch live wires.
- Stay as far as possible from high-voltage cables and power equipment.
- Leave a minimum of 10 mm space for ventilation between the top and bottom edges of the controller and enclosure walls.

WARNING

EXPLOSION OR FIRE HAZARD



Do not use this product with flammable liquids. Do not install in hazardous locations as defined by National Electrical Code, ANSI/NFPA 70.

INSTALLATION & DIMENSIONAL DATA

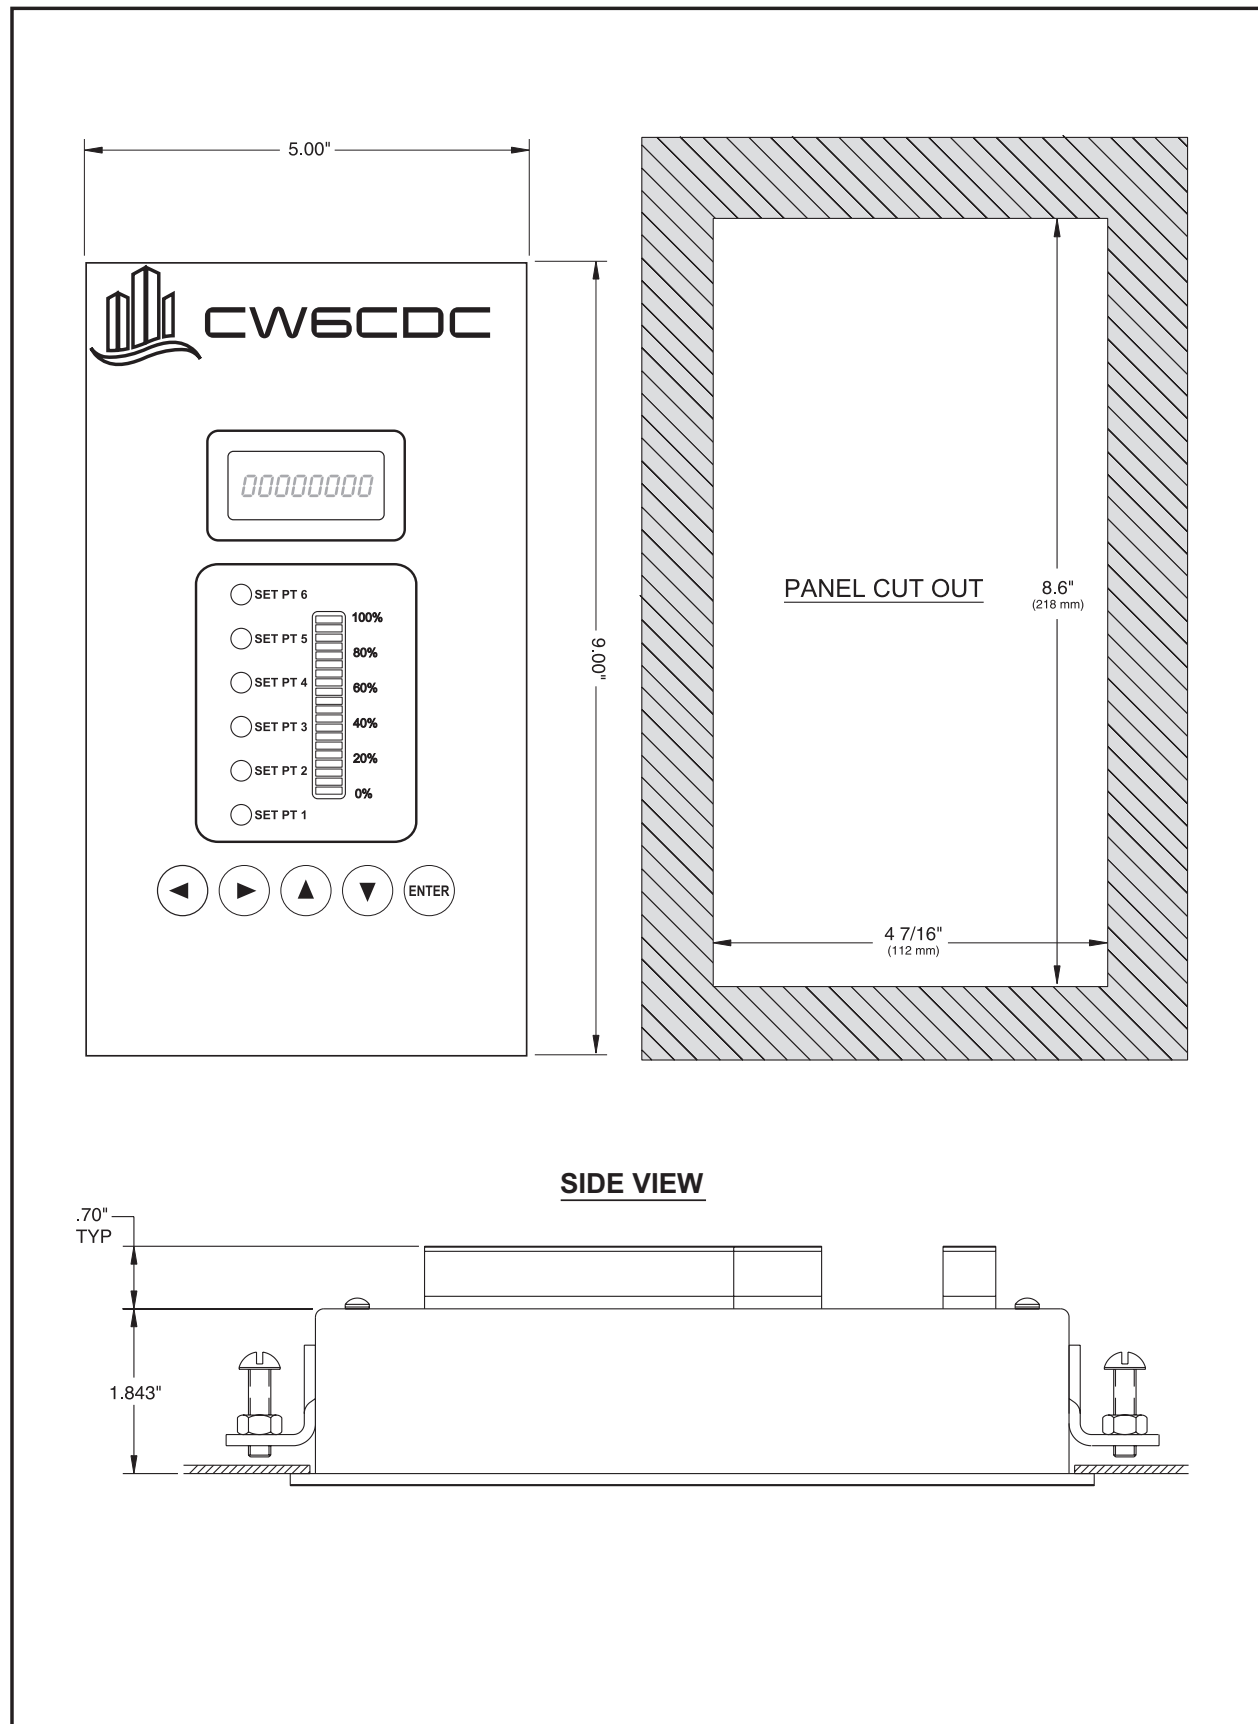


FIGURE 1 Dimensions and panel cut-out. Dimensions are indicative and may be subject to change without notification.

INSTALLATION & DIMENSIONAL DATA

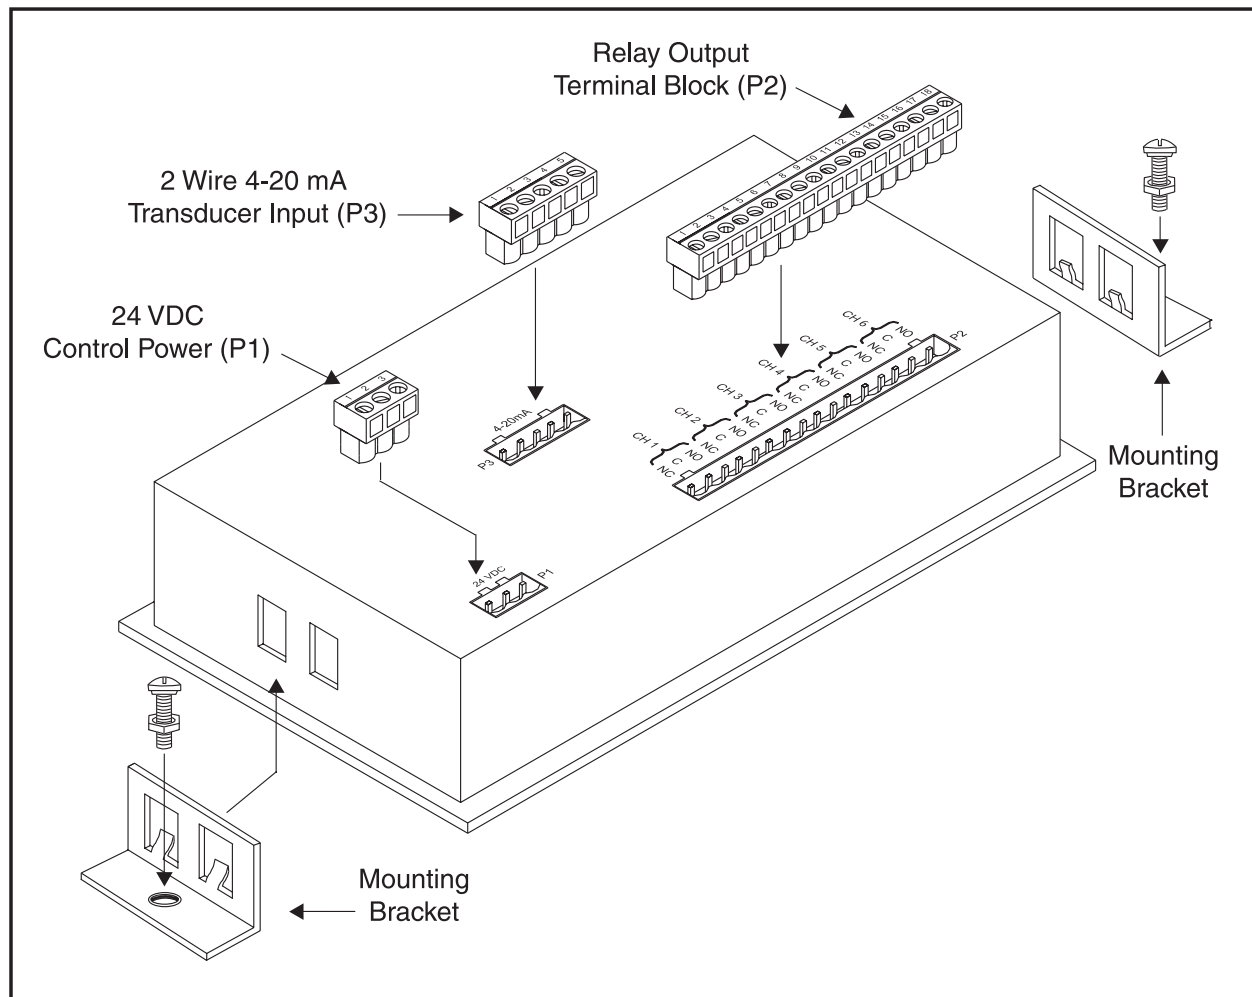


FIGURE 2 Standard CW6CDC level controller kit.

ELECTRICAL CONNECTIONS


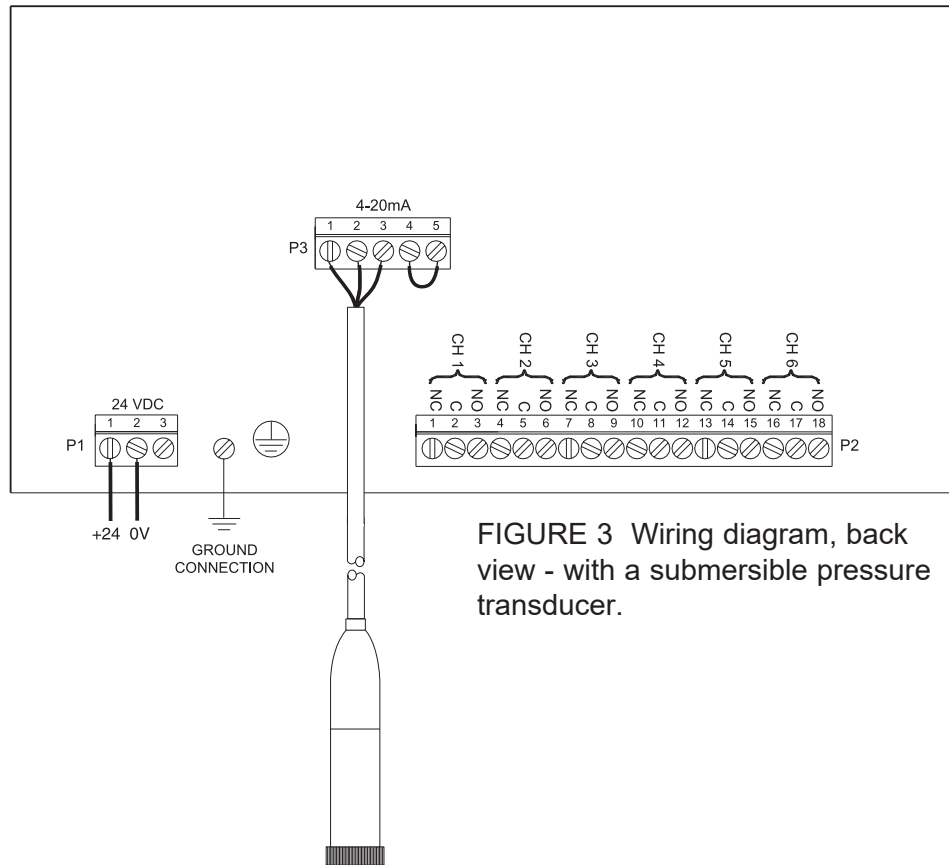


FIGURE 3 Wiring diagram, back view - with a submersible pressure transducer.

1. **POWER (Terminal P1)**
Connect power to terminal 1 and 2: the unit requires 24 VDC (+/- 10%).
 2. **TRANSDUCER (Terminal P3)**
For loop powered transducers (2 wire) connect power conductor to terminal 1 and 2. If the cable is protected with an overall shield, connect the shield to terminal (3). Terminal 4 and 5 must be connected if an output follower is not required. If no valid input is present, the controller will display **SENSOR** and all outputs will be de-energized.
- NOTE:** To avoid ground loops, the shield of the signal cable must only be grounded at one end.
3. **OUTPUT RELAY CONNECTIONS**
The relay outputs are rated up to 10 A (resistive) at 240 VAC, fuse protection is required individually or as a group.

FUNCTION KEYS / DISPLAYS

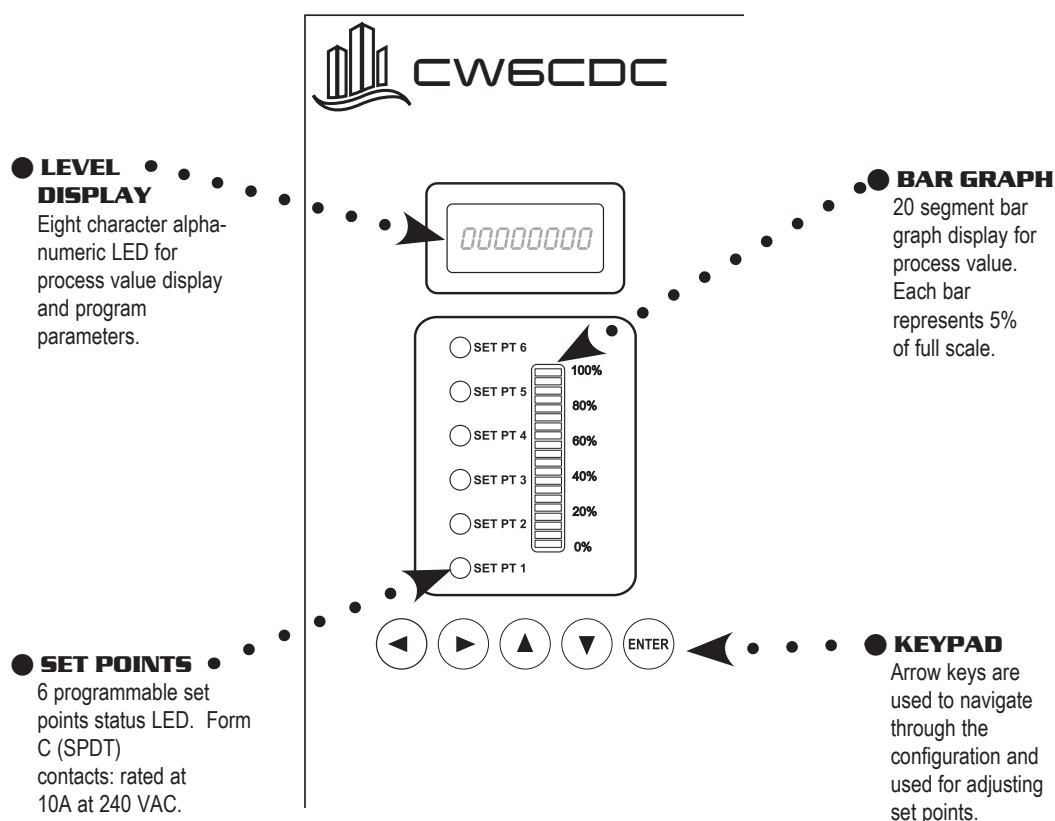

LEFT AND RIGHT ARROW KEYS

are used to navigate through the menu items. These arrow keys can also be used to back out when in editing and simulation mode.



ENTER KEY

is used for selecting a menu item for editing. This key is also used after a value has been edited to store in memory.



UP AND DOWN ARROW KEYS

is used to increase or decrease the current value being edited.

NOTE: The display automatically returns to “level” after 20 seconds of inactivity, regardless of where it was left.

Pressing once will increment the current value by **one** unit. Pressing and holding will begin repeatedly incrementing after a short delay. If the operator continues to hold the key, the value continues to increment at a faster rate.

SETTING UP LEVELS AND SIMULATION


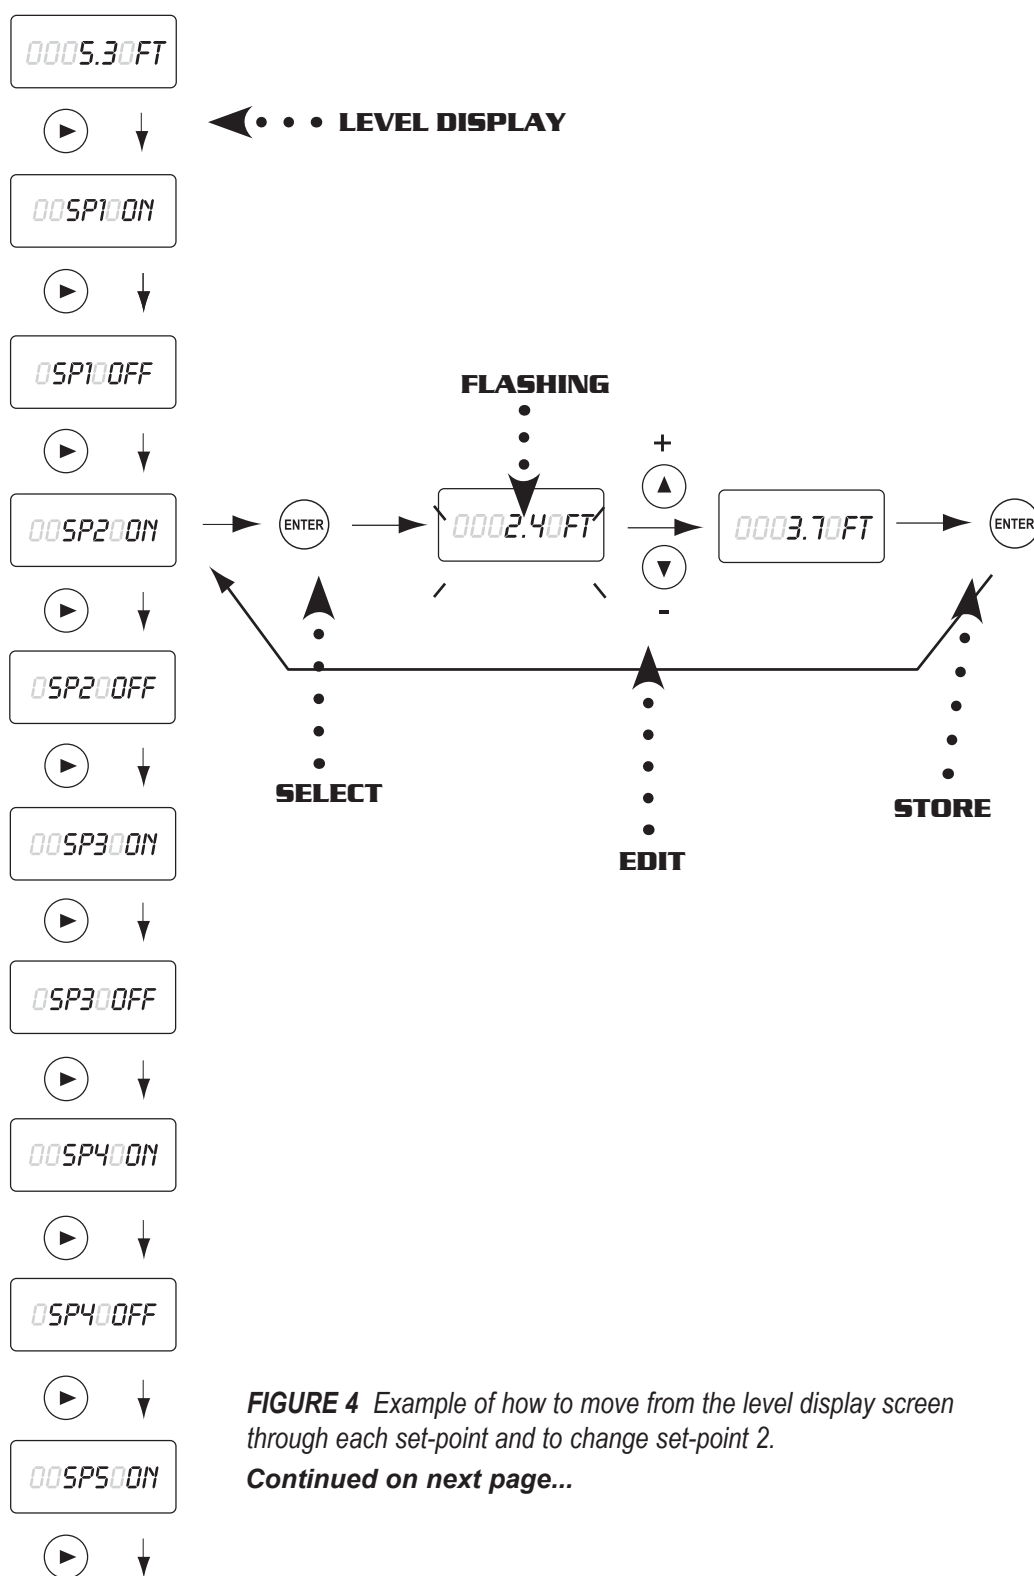


FIGURE 4 Example of how to move from the level display screen through each set-point and to change set-point 2.
Continued on next page...

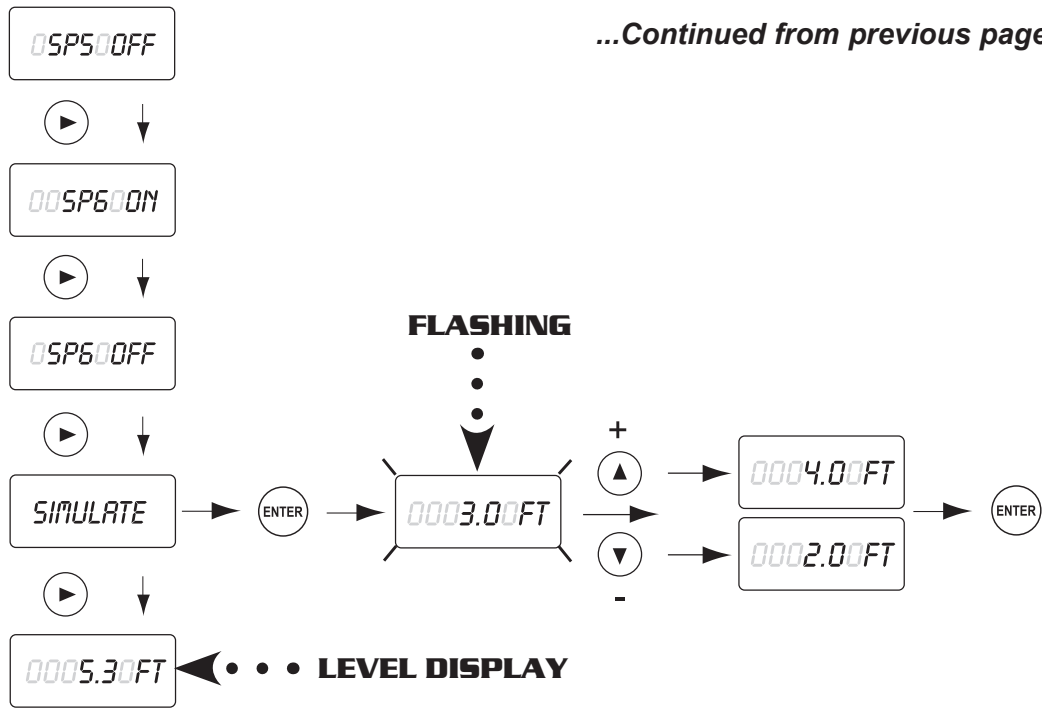

The adjustable **ON and OFF** function allows for an individual hysteresis or differential setting of each set-point. For an **emptying** application, the **ON** set-point must be **greater** than the **OFF** set-point. For a **filling** application, the **ON** set-point must be **less** than the **OFF** set-point (*Refer to **FIGURE 5***).

NOTE: For proper operation of the CW6CDC controller, the **ON and OFF** set-points must not be set to the same value.

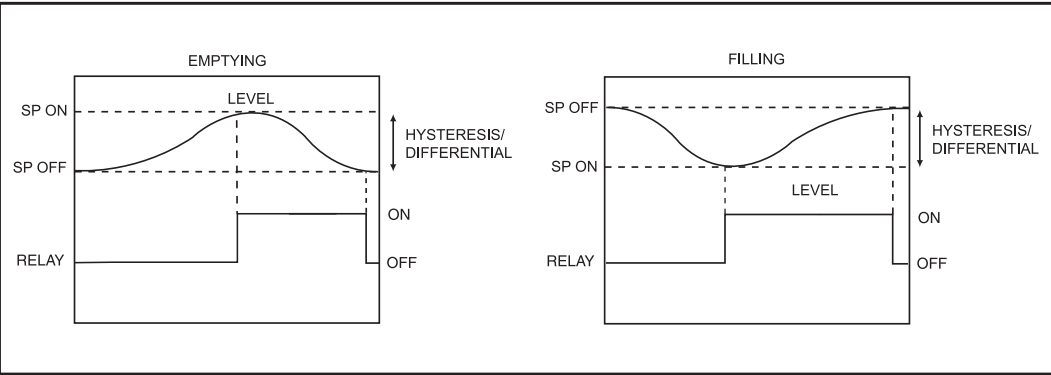


FIGURE 5

CONFIGURATION

To enter the configuration mode, simultaneously press the **LEFT** and **RIGHT** arrow key and hold for three (3) seconds with the unit powered **ON**.

NOTE: Eight (8) seconds of inactivity (no keys pressed) will terminate the configuration menu and exit back to the run menu.

The first item in the configuration menu is the **UNITS** selection. Use the **LEFT** or **RIGHT** arrow keys to navigate through all the items in this menu.

UNITS Select the unit of measure display after the process value.
 FT = Feet
 IN = Inches
 CM = Centimeters
 % = Percentage
 °C = Degrees Celsius
 °F = Degrees Fahrenheit
 PS = Pound Per Square Inch (PSI)
 BR = Bar
 NONE = Blank, No Units Displayed

When you are at the item you wish to edit, press the **ENTER** key and the original value for the item selected will flash. Use the **UP** and **DOWN** arrow keys to change to your desired value and press **ENTER**.

NOTE: The edited value will not be saved until the **ENTER** key is pressed.

4 mA Set the value displayed when the signal value is equal to 4 mA (zero).
 The default value is zero.

20 mA Set the value displayed when the signal value is equal to 20 mA (span).
 The default value is 10.0.

BAR MIN This value set the level for which all bars on the bar graph will turn OFF.

BAR MAX This value set the level for which all bars on the bar graph will turn ON.

OFFSET An offset value can be added or subtracted to bring the display value to zero at atmospheric pressure. If you are using a submersible pressure transducer, the level readout at atmospheric pressure (out of the wet well) should be zero. If it is not, add or subtract (negative) a value to bring the display to zero. Check the level readout to verify it is zero. If not, try changing the offset again.

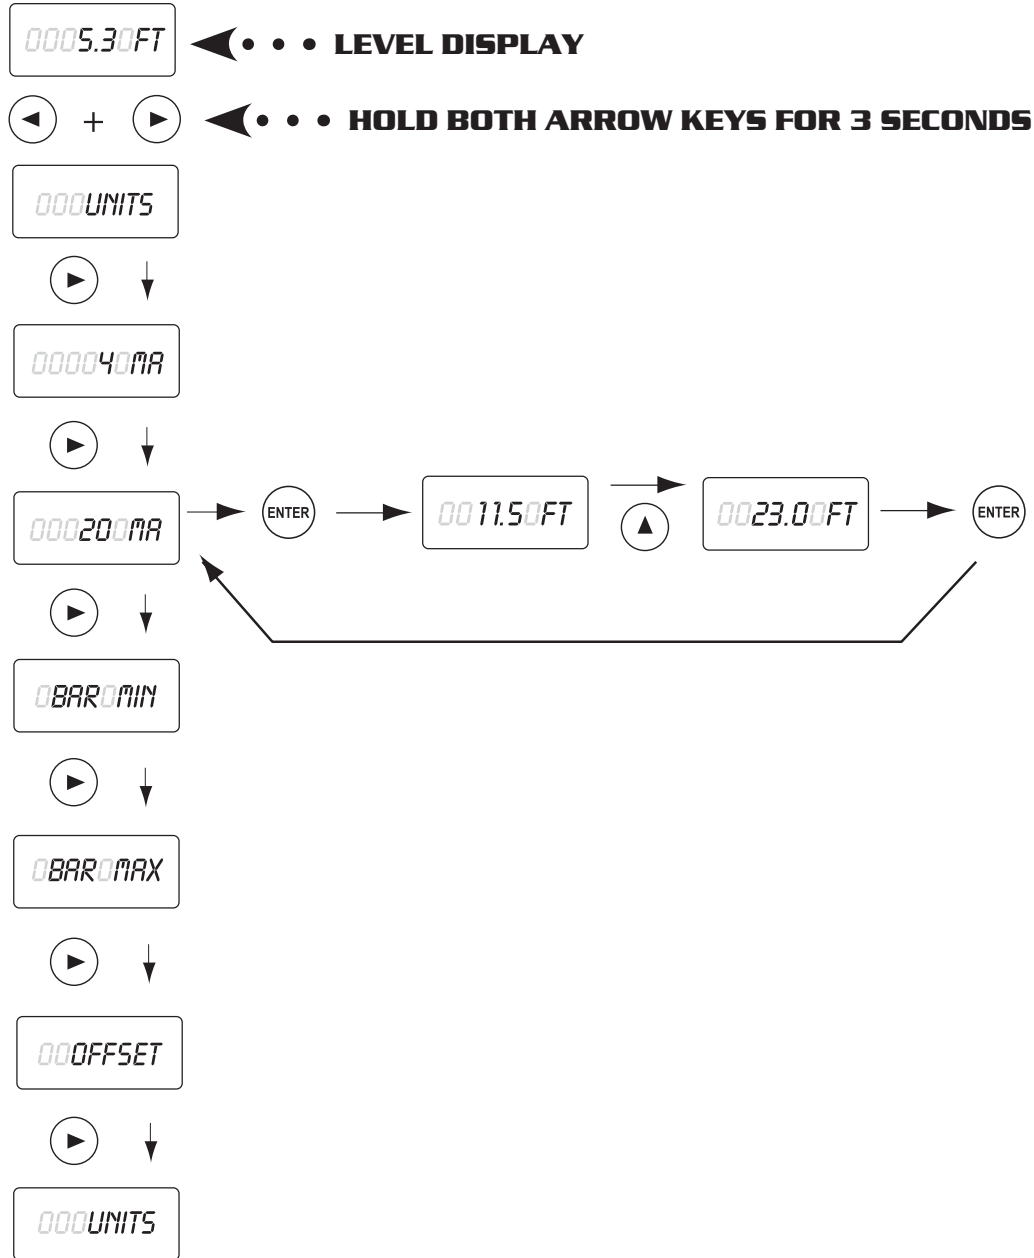


FIGURE 6 Use the right or left arrow keys to navigate through these menu items. Begin with UNITS, 4 mA, 20 mA, BAR MIN, BAR MAX, OFFSET, and back to UNITS.

NOTE: Eight (8) seconds of inactivity (no keys pressed) will terminate the configuration menu and exit back to the run menu.

CONFIGURATION MODE PARAMETERS

	MIN	MAX	DEFAULT	USER
000UNITS	FT, IN, CM, %, °C, °F, PS, BR, (NONE)		FT	
000040MA	0.0	999.9	0.0 FT	
000200MA	0.0	999.9	10.0 FT	
0BAR0MIN	0.0	999.9	0.0 FT	
0BAR0MAX	0.0	999.9	10.0 FT	
000OFFSET	-9.9	9.9	0.0 FT	

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

RUN MODE PARAMETERS

	MIN	MAX	DEFAULT	USER FUNCTION	USER VALUE
LEVEL DISPLAY	-99.9	999.9	SENSOR on invalid input signal		
<i>00SP100N</i>	0.0	999.9	1.5 FT		
<i>0SP100FF</i>	0.0	999.9	1.0 FT		
<i>00SP200N</i>	0.0	999.9	2.5 FT		
<i>0SP200FF</i>	0.0	999.9	2.0 FT		
<i>00SP300N</i>	0.0	999.9	4.5 FT		
<i>0SP300FF</i>	0.0	999.9	4.0 FT		
<i>00SP400N</i>	0.0	999.9	6.5 FT		
<i>0SP400FF</i>	0.0	999.9	6.0 FT		
<i>00SP500N</i>	0.0	999.9	8.5 FT		
<i>0SP500FF</i>	0.0	999.9	8.0 FT		
<i>00SP600N</i>	0.0	999.9	9.5 FT		
<i>0SP600FF</i>	0.0	999.9	9.0 FT		
<i>SIMULATE</i>	4 mA value in configuration	20 mA value in configuration			

SPECIFICATIONS

INPUT TYPE

4-20 mA signal.

INPUT IMPEDANCE

100 ohms.

INPUT RESOLUTION

12 - bits, 0.1% of full scale.

SAMPLING CYCLE TIME

100 mS.

AVERAGING

8 consecutive samples.

ACCURACY

0.5% of full scale.

EXCITATION VOLTAGE

24 VDC, 30 mA available for loop powered transducers.

RELAY OUTPUTS

Six programmable relay outputs with LED indication. "Form C" (SPDT) contacts: rated at 10A at 240 VAC.

LEVEL DISPLAY

Eight character alpha-numeric LED for process value and program parameters. The display is SunBrite grade, sharp and clear, even in direct sunlight from 10 feet away.

POWER

24 VDC (+/- 10%). 200 mA nominal, 400 mA max.

OPERATING TEMPERATURE

-15°C to 70°C (0°F to 150°F) at up to 0-90% RH non-condensing.

ENCLOSURE RATING

Front Panel: IEC Standard IP54 (with additional gasket) for indoor use.

Rear Case: IEC Standard IP20.

BAR GRAPH

20 segment bar graph display for process value. Each bar represents 5% of full scale.



+1-844-4PRIMEX (477-4639)
WWW.PRIMEXCONTROLS.COM

PN 1024820D 10/20
© 2015 SJE, Inc. All Rights Reserved.
PRIMEX is a trademark of SJE Inc.